



Version No.	D	Enable Time	2022.9
-------------	---	-------------	--------

No.	Part Name (Chinese)	Part Name (English)	Code	Qty	No.	Part Name (Chinese)	Part Name (English)	Code	Qty
1	上压板	Out Flange	10305001078	1	49	右刷盖	Right Brush Cover	10101008037	1
2	砂轮片230	Grinding Wheel 230	21201006051	1	50	铭牌	Nameplate	20302007609	1
3	下压板	Inner Flange	10305001090	1	51	开关	Switch	10601001123	1
4	砂轮罩230	Wheel Guard 230	10401001004	1	52	电容	Capacitance	10603001005	1
5	输出轴	Output Spindle	10301001083	1	53	电缆压板	Cord Anchor	10101011123	1
6	半圆键4×5×13	Woodruff Key 4×5×13	30601006	1	55	旋转锁钮	Knob	10101007097	1
7	防尘盖	Dust Proof Cover	10101008036	1	56	锁钮弹簧	Knob Spring	10303001053	1
8	带平弹垫螺钉M5×16	Screw M5×16	30201062	4	57	左手柄(包胶)	Left Handle	10101004200	1
11	前盖	Gear Box Cover	10203004054	1	58	右手柄(包胶)	Right Handle	10101004199	1
12	轴承6202	Bearing 6202	30104038	1	59	电缆护套	Cord Sleeve	10102001012	1
13	轴承压板	Bearing Pressure Plate	10401002030	1	60	电源线2×1.0	Cord 2×1.0	10602006143	1
14	带平弹垫螺钉M4×12	Screw M4×12	30201008	3	62	带销扳手30	Wrench 30	21201002055	1
16	大齿轮	Big Gear	10302004084	1	63	内六角扳手6	Socket Head Wrench 6	21201002020	1
17	波形垫圈14	Wave Washer 14	30402004	1					
18	轴用弹性挡圈14	Spring Circlip for Shaft 14	30301025	1					
19	滚针轴承HKH1016	Needle Bearing HKH1016	30101027	1					
20	头壳	Gear Box	10201004159	1					
21	自攻螺钉ST5×35	Screw ST5×35	30202068	4					
22	侧手柄M14	Side Handle M14	21201001031	1					
23	轴用弹性挡圈8	Spring Circlip for Shaft 8	30301027	1					
24	自锁弹簧	Self-lock Spring	10303001051	1					
25	自锁组件	Self-lock Assembly	10701007004	1					
26	六角锁紧螺母M8×1	Nut M8×1	30501099	1					
27	弹性垫圈8	Spring Washer 8	30401013	1					
28	小齿轮	Small Gear	10302004085	1					
29	轴承6201	Bearing 6201	30104035	1					
30	孔用弹性挡圈32	Spring Circlip for Hole 32	30302014	1					
31	转子	Armature	10502001136	1					
32	轴承608	Bearing 608	30104024	1					
33	轴承衬套	Bearing Sleeve	10102002003	1					
34	挡风圈	Air Deflector	10101005061	1					
35	自攻螺钉ST5×65	Screw ST5×65	30202078	2					
36	定子压板	Stator Pressing Plate	10401004056	2					
37	定子	Stator	10501001116	1					
38	商标	Trademark	20402007150	1					
39	机壳	Housing	10101001178	1					
40	碳刷	Carbon Brush	10605001075	2					
41	刷架	Brush Holder	10606001096	2					
42	自攻螺钉ST4×10	Screw ST4×10	30202013	2					
43	左刷盖	Left Brush Cover	10101008038	1					
44	螺钉M5×8	Screw M5×8	30201101	2					
45	盘簧	Coil Spring	10303002010	2					
46	电感	Inductance	10604001046	1					
47	软启动	Soft Start	10601003003	1					
48	自攻螺钉ST4×16	Screw ST4×16	30202025	5					
Version No.		D		Enable Time		2022.9			