



Version No.	D	Enable Time	2022.9
-------------	---	-------------	--------

No.	Part Name(Chinese)	Part Name(English)	Code	Qty	No.	Part Name(Chinese)	Part Name(English)	Code	Qty	
1	螺盖	Screw Cover	10801013060	1	45	悬吊组件 由19-23\零件组成	Suspension Assembly (consisting accessories of 19~23\P)	10801013102	1	
2	支腿	Outtrigger	10801013061	3						
3	底座	Base Bracket	10801013062	1	46	手轮组件 由35-44\零件组成	Hand Wheel Assembly (consisting accessories of 35~44\P)	10801013103	1	
4	微调组件	Trim Assembly	10801013063	1						
5	动圈	Moving Circle	10801013064	1	47	外壳组件 由24-34\零件组成	Housing Assembly (consisting Accessories of 24~34\P)	10801013107	1	
6	对地玻璃	Ground Glass	10801013065	1						
7	压板	Anchor	10801013066	3						
8	转盘	Turntable	10801013067	1						
9	主板	Main Plate	10801013052	1						
10	接线板	Terminal Block	10801013068	1						
11	立柱	Upright Column	10801013069	3						
12	导电O型圈	Conductive O Ring	10801013070	1						
13	一体化重锤	Integrated Hammer	10801013071	1						
14	对地激光器	Ground Laser	10801013072	1						
15	O型圈	O Ring	10801013073	1						
16	配重块	Clump Weight	10801013074	1						
17	摆体	Pendulum	10801013075	1						
18	激光器	Laser	10801013076	3						
19	长轴、螺纹套	Threaded Sleeve for Long Shaft	10801013077	1						
20	短轴、螺纹套	Threaded Sleeve for Short Shaft	10801013078	1						
21	螺钉M3×14	Set Screw M3×14	30201181	3						
22	上吊耳	Upper Lifting Lug	10801013079	1						
23	轴承、中间架	Middle Frame for Bearing	10801013080	1						
24	皮带	Belt	10801013081	1						
25	皮带扣	Belt Buckle	10801013082	2						
26	外壳	Housing	10801013105	1						
27	水泡	Blister	10801013084	1						
28	按键板组件	Key Plate Assembly	10801013085	1						
29	按键贴	Key Sticker	10801013086	1						
30	垂直窗口贴	Vertical Window Paste	10801013087	4						
31	水平玻璃	Horizontal Glass	10801013088	1						
32	水平窗框	Horizontal Window Frame	10801013089	1						
33	电池盒	Battery Box	10801013090	1						
34	电池盒盖	Battery Box Cover	10801013106	1						
35	锁紧板	Lock Plate	10801013092	1						
36	扭簧	Torsion Spring	10801013093	1						
37	扭簧衬套	Torsion Spring Sleeve	10801013094	1						
38	定位簧片	Location Spring	10801013095	1						
39	凸轮	Cam	10801013096	1						
40	微动开关	Microswitch	10801013097	1						
41	锁紧支架	Lock Supporter	10801013098	1						
42	开关盖	Switch Cover	10801013099	1						
43	插片	Illustration	10801013100	1						
44	手轮	Hand Wheel	10801013101	1						
Version No.		D			Enable Time			2022.9		